



Stuffer Roof



Assembly Instructions

Step 1:



Unpack the Feeder


- The feeder will arrive as pictured.
- Remove the wooden pieces holding the roof together.
- Cut the banding.

Step 2:



Extend The Roof

- Remove the nuts from the bolts on top of the feeder.
- Pull the **top section of the roof outward**. (Ensure the thinner section is on the outside.)
- As you pull, **two hinges will drop**.

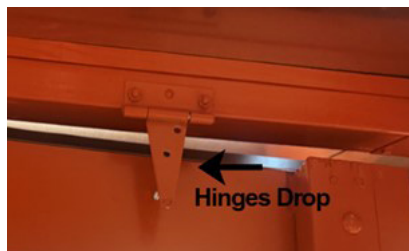

Learn more

Visit our website: smidley.com

Locate a dealer: smidley.com/dealer-locator

Contact us

Phone: [800-392-5632](tel:800-392-5632)

Email: sales@smidley.com






Stuffer Roof



Assembly Instructions

Step 3:

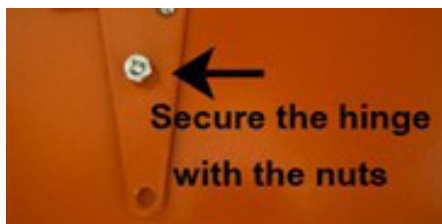

Adjust The Brackets


- Align the hinge that dropped and **secure it in place** with the nuts.

Step 4:

Repeat on the other side

- Perform the same adjustment on the opposite side.

Step 5:

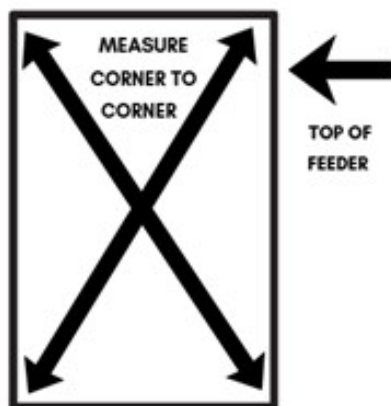

Check Roof Alignment

- If the roof does not align correctly, the feeder is not square.
- Ensure the feeder is on a **flat surface** or add elevation to one side.
 - Measure corner to corner on the top of both sides of the feeder.
 - The longer corner needs a block underneath the runner to square the feeder up.
- The roof will fit properly once the feeder is square.

Step 6:



Final Appearance

- The feeder should look like the reference image when complete.

Learn more

Visit our website: smidley.com

Locate a dealer: smidley.com/dealer-locator

Contact us

Phone: [800-392-5632](tel:800-392-5632)

Email: sales@smidley.com

